

# AIRPORT DIAGRAM


BIRMINGHAM-SHUTTLESWORTH INTL (BHM)  
BIRMINGHAM, ALABAMA

AL-50 (FAA)

ATIS	119.4	270.1
BIRMINGHAM TOWER	119.9	317.725
GND CON	121.7	348.6
CLNC DEL	125.675	305.2

SE-4, 07 FEB 2013 to 07 MAR 2013

SE-4, 07 FEB 2013 to 07 MAR 2013

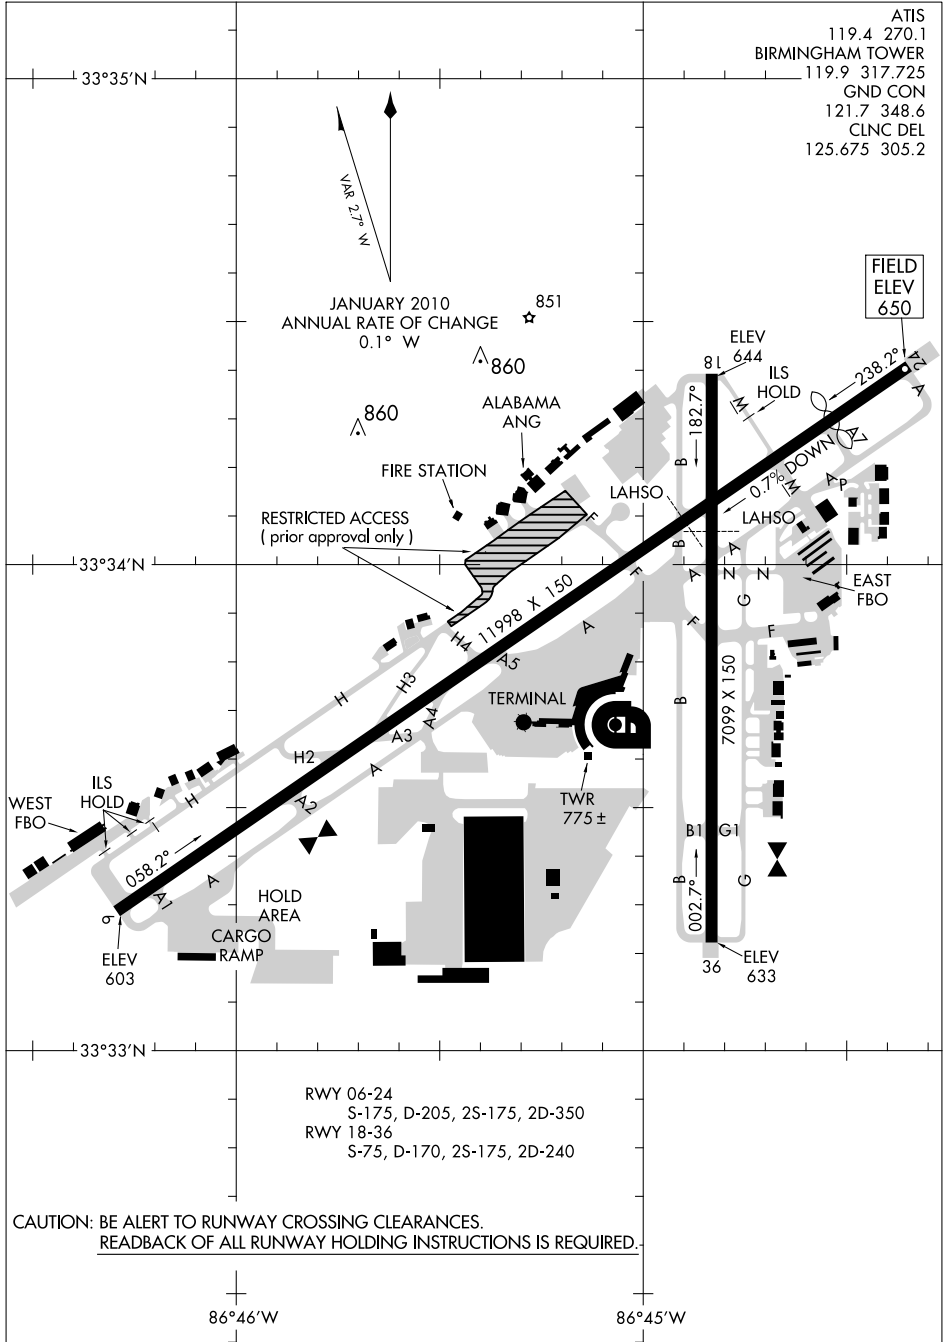

RWY 06-24  
S-175, D-205, 2S-175, 2D-350  
RWY 18-36  
S-75, D-170, 2S-175, 2D-240

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

# AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA  
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)