

AIRPORT DIAGRAM

AL-268 (FAA)

MOBILE DOWNTOWN (BFM)
MOBILE, ALABAMA

ATIS
135.575
DOWNTOWN TOWER ★
118.8 251.1
GND CON
121.7 239.3

FIELD
ELEV
26

WEST HELIPAD

EAST HELIPAD

HS 1

TWR
158

FIRE
STATION

RWY 14-32
S-75, D-185, 2S-175, 2D-325

RWY 18-36
S-76, D-150, 2S-175, 2D-320

NOTE: HOT CARGO SPACE
ASSIGNED TO TWY
"L" AS ASSIGNED

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READEBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

88°05'W

88°04'W

30°38'N

30°37'N

81 ELEV
25

181.4°

JANUARY 2010
ANNUAL RATE OF CHANGE
0.1° W

7800 X 150

001.4°

ELEV
25

36

ELEV
19

320.2°

989 X 150

SE-4, 07 FEB 2013 to 07 MAR 2013

SE-4, 07 FEB 2013 to 07 MAR 2013

AIRPORT DIAGRAM

MOBILE, ALABAMA
MOBILE DOWNTOWN (BFM)