


# ILS or LOC RWY 11

COLUMBIA METROPOLITAN (CAE)

LOC I-CAE <b>110.3</b>	APP CRS <b>112°</b>	Rwy ldg TDZE Apt Elev	<b>8601</b> <b>236</b> <b>236</b>
---------------------------	------------------------	-----------------------------	---

<p>ASR</p>	<p>ALSIF-2</p>	<p>MISSED APPROACH: Climb to 1100 then climbing right turn to 2100 direct CAE VORTAC and hold.</p>	



ATIS <b>120.15</b>	COLUMBIA APP CON <b>133.4 285.6</b> (290°-109°) <b>124.15 338.2</b> (110°-289°)	COLUMBIA TOWER <b>119.5 257.8</b>	GND CON <b>121.9 348.6</b>	CLNC DEL <b>119.75</b>
-----------------------	---	--------------------------------------	-------------------------------	---------------------------

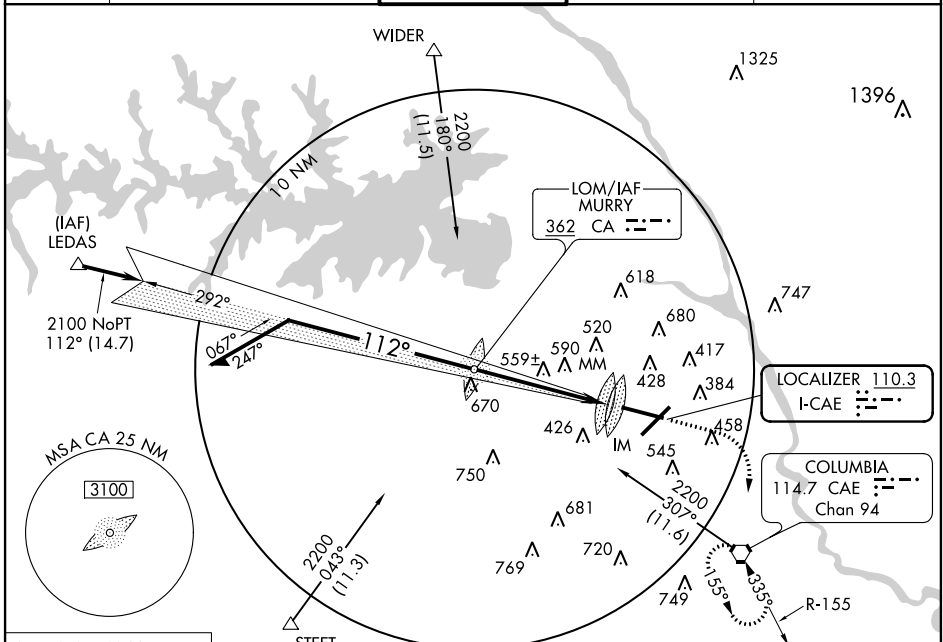

ALTERNATE MISSED APCH FIX

MURRY CA 362

## ADF REQUIRED

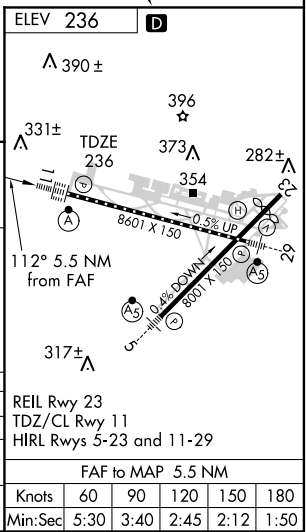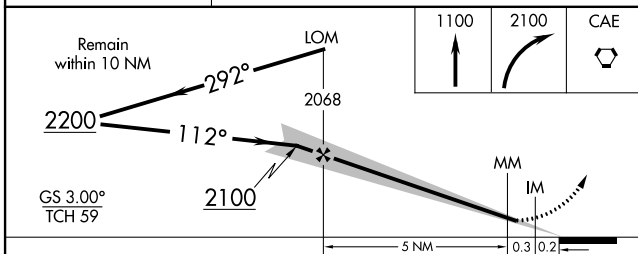

CATEGORY	A	B	C	D
S-ILS 11		436/18	200 (200-½)	
S-LOC 11	820/24	584 (600-½)	820/50 584 (600-1)	820/60 584 (600-¼)
CIRCLING	820-1	584 (600-1)	840-1¾ 604 (700-1¾)	880-2 644 (700-2)

SE-2, 07 FEB 2013 to 07 MAR 2013

SE-2, 07 FEB 2013 to 07 MAR 2013