


VOR-A
ELKO RGNL (EKO)

VOR/DME BQU 114.5 Chan 92	APP CRS 324°	Rwy Idg TDZE Apt Elev N/A N/A 5140
---	------------------------	--

▽
▲ MISSED APPROACH: Climbing left turn to 10000 direct BQU VOR/DME and hold.



ASOS 119.275	SALT LAKE CENTER 132.25 338.35	UNICOM 123.0 (CTAF)	122.7 📶
------------------------	--	-------------------------------	-----------------------

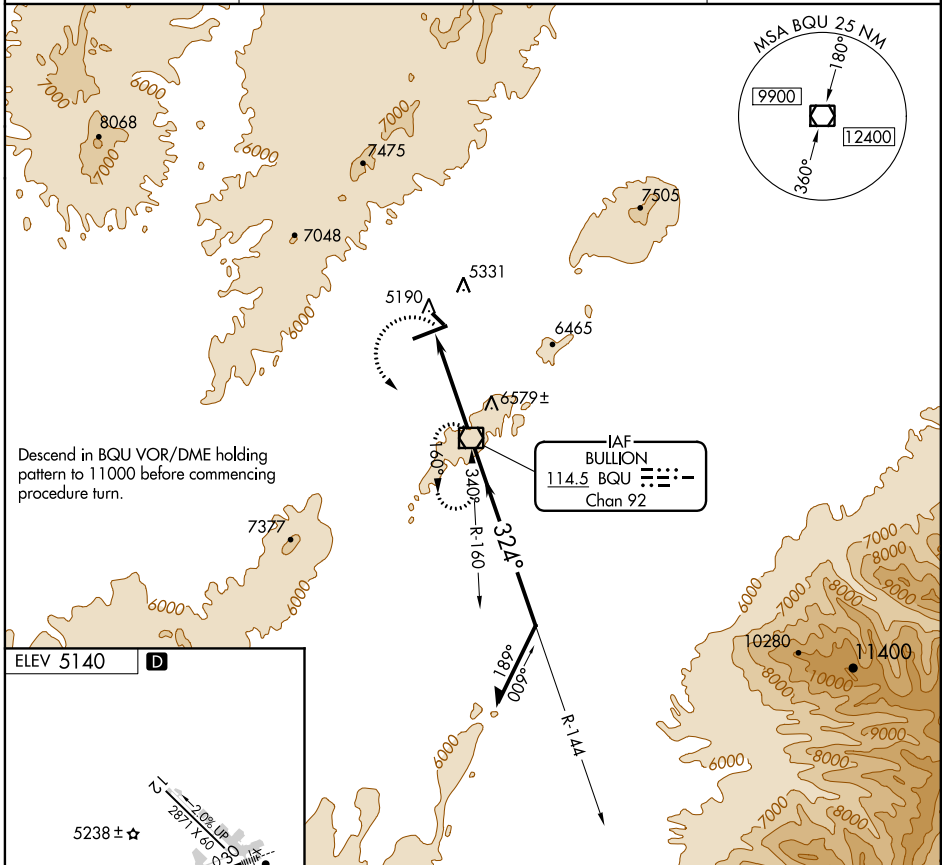

SW-4, 07 FEB 2013 to 07 MAR 2013

SW-4, 07 FEB 2013 to 07 MAR 2013

Descend in BQU VOR/DME holding pattern to 11000 before commencing procedure turn.

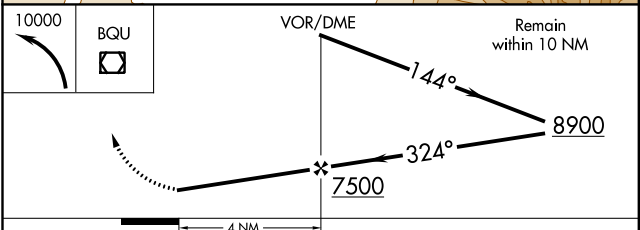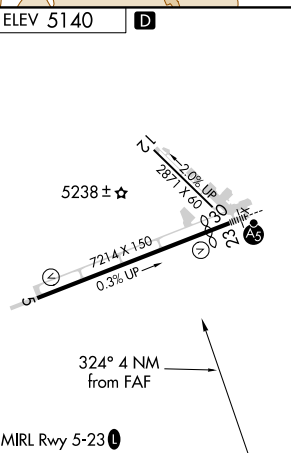

FAF to MAP 4 NM		CATEGORY	A	B	C	D
Knots	60 90 120 150 180	CIRCLING	6580-1¼ 1440 (1500-1¼)	6580-1½ 1440 (1500-1½)	6580-3	1440 (1500-3)
Min:Sec	4:00 2:40 2:00 1:36 1:20					