LOC I-FWA	APP CRS	Rwy Idg	8001
109.9	138°	TDZE	802
		Apt Elev	814

LOC BC RWY 14
FORT WAYNE INTL (FWA)

ADF or DME or RADAR Required. ASR

MISSED APPROACH: Climb to 3000 via I-FWA SE course to HOAGY LOM/FWA 4.3 DME and hold, continue climb-in-hold to 3000.

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 349.0	127.2 284.6	119.1 272.725	121.9 348.6	124.75

BACK COURSE

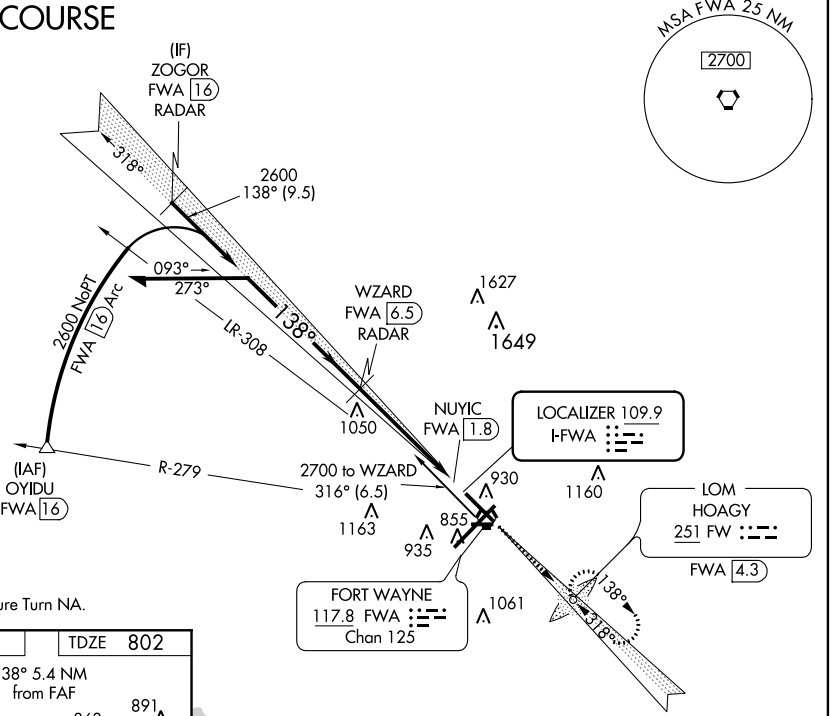

Cat E Procedure Turn NA.

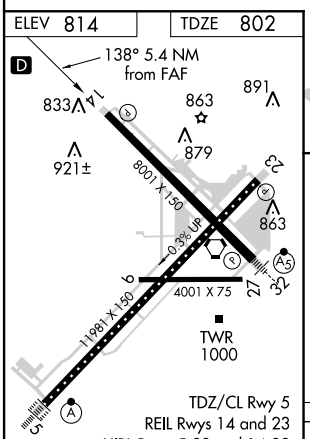

FAF to MAP 4.7 NM					
Knots	60	90	120	150	180
Min:Sec	4:42	3:08	2:21	1:53	1:34

DME or RADAR REQUIRED

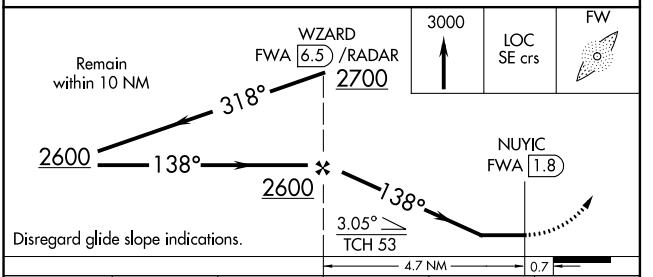

CATEGORY	A	B	C	D	E
S-14	1220-1	418 (500-1)	1220-1¼	418 (500-1¼)	1220-1½ 418 (500-1½)
CIRCLING	1300-1	486 (500-1)	1300-1½ 486 (500-1½)	1380-2 566 (600-2)	1520-2½ 706 (800-2½)

EC-2, 07 FEB 2013 to 07 MAR 2013
EC-2, 07 FEB 2013 to 07 MAR 2013